

## FCC Certifications



This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation.

## CE Mark Warning



This equipment complies with the requirements relating to electromagnetic compatibility, EN 55022 class A for ITE, the essential protection requirement of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility.

Company has an on-going policy of upgrading its products and it may be possible that information in this document is not up-to-date. Please check with your local distributors for the latest information. No part of this document can be copied or reproduced in any form without written consent from the company.

## Trademarks:

All trade names and trademarks are the properties of their respective companies.

Copyright © 2004, All Rights Reserved.

---

## Table of Content

---

<b>Unpacking Information .....</b>	<b>1</b>
<b>1. Introduction to 24-port Fast Ethernet Web Smart Switch .....</b>	<b>2</b>
1.1 General Description .....	2
1.2 Key Features.....	3
1.3 The Front Panel .....	3
1.4 The Rear Panel.....	5
<b>2. Installing 24 Fast Ethernet Web Smart Switch.....</b>	<b>6</b>
2.1 Desktop Installation.....	6
2.2 Rack-mount Installation .....	6
2.3 Installing Network Cables.....	7
2.4 Network Application .....	7
<b>3. Management guide .....</b>	<b>8</b>
3.1 Access the Switch.....	8
3.2 Home Page.....	10
3.2.1 System .....	11
3.2.2 Ports.....	12
3.2.3 VLANS .....	13
3.2.4 Aggregation/Trunking Configuration.....	14
3.2.5 Qos.....	15
3.2.6 Discovery .....	16
3.2.7 Default.....	17
3.2.8 Reboot.....	17
<b>4. Product Specifications.....</b>	<b>18</b>

## Unpacking Information

---

Thank you for purchasing the 24-port Fast Ethernet Web Smart Switch. Before you start, please check all the contents of this package.

The product package should include the following:



1. One 24-port Fast Ethernet Web Smart Switch
2. One power cord
3. Rubber foot and screws
4. Rack-mount brackets
5. One RS-232 Cable (Optional)
6. One CD-ROM for user's manual
7. One Quick Installation Guide

# 1. Introduction to 24-port Fast Ethernet Web Smart Switch

---

## *1.1 General Description*

---

The device is a 24-port 10/100Mbps Ethernet Web Smart Switch.

Compare to the traditional 10/100Mbps Ethernet, the switch delivers a dedicated Fast Ethernet connection to every attached client with no congestion issue. The NWay auto-negotiation operation automatically negotiates with the connected partners on the network speed and duplex mode; that provides an easy way to integrate 10/100Mbps networks with no pain. It is ideal for micro-segmenting large networks into smaller, connected subnets for improved performance, enabling the bandwidth demanding multimedia and imaging applications.

Out of the ordinary dumb switches, the 24-port Fast Ethernet Web Smart Switch embedded advanced management capability; that the device can be managed through console port or web-based UI. This is much useful for system manager to monitor and control the system efficiently.

Store-and-forward switching mode promises the low latency plus eliminates all the network errors, including runt and CRC error packets. To work under full-duplex mode, transmission and reception of the frames can occur simultaneously without causing collisions as well as double the network bandwidth.

The switch is plug-n-play without any software to configure and also fully compliant with all kinds of network protocols. Moreover, the rich diagnostic LEDs on the front-panel provide the operating status of individual port and whole system.

## 1.2 Key Features

- 24 fixed 10/100Mbps Fast Ethernet ports for easy network connecting application.
- Provide Auto-discovery Function for easy Network management.
- Provide 8K MAC address entries and 24 groups VLAN table
- Support up to 4 ports and 6 groups port aggregation.
- Supports 3 types of QoS priority for port base, 802.1p & TCP/IP TOS/DiffServ(DS) priority field
- Support full duplex flow control and half duplex back pressure
- Store-and-forward forwarding scheme
- Error packet filtering
- Supports 320K bytes buffer Memory
- Support local Console port or Web-based UI for configuration
- Internal switching power supply (100-240Vac/50-60Hz)

## 1.3 The Front Panel

The front panel of the switch is shown as below



### Port Operation

There are 24 \* 100Mbps RJ-45 (copper) ports on the front panel. The auto-negotiation feature of the switch allows each port of the device running at one of the following operation modes:

Speed	Duplex Mode
10Mbps	Full Duplex
	Half Duplex
100Mbps	Full Duplex
	Half Duplex

All ports supports MDI/MDI-X **auto crossover** capability that is the port can connect either the PC or hub without crossover cable adjustment.

### Wiring for 10/100Mbps (Copper)

Following are the summaries of cabling required:

Media	Speed	Wiring
10/100Mbps copper	10Mbps	Category 3,4,5 UTP/STP
	100Mbps	Category 5 UTP/STP

### LEDs Definition

The rich diagnostic LEDs on the front panel can provide the operating status of individual port and whole system.

#### *Power LED*

This indicator lights green when the switch is receiving power; otherwise, it is off.

#### *Port LEDs*

Every RJ-45 port on the front panel relevant one LED (10/100Mbps) for indicating the connection speed and activity status.

Port LED summary table

LED	Status	Statement
10/100M	Steady green	Connected as 10/100Mbps
	Blinking green	The port is transmitting/receiving data

If the port is connected but the Port LED is dark, check the following items:

- The switch and the connected device's power are on or not.
- The connecting cable is good and with correct type
- The cable is firmly seated in its connectors in the switch and in the associated device
- The connecting device, including any network adapter is well installed and functioning

#### *1.4 The Rear Panel*

---

The rear panel of the switch is shown as below



## **2. Installing 24 Fast Ethernet Web Smart Switch**

---

This switch can be placed directly on your desktop, or mounted in a rack. Users can immediately use most of the features simply by attaching the cables and turning the power on.

### ***2.1 Desktop Installation***

---

For desktop installation, the switch needs to put on a clean, flat desk or table close to a power outlet. Plug in all network cables and the power cord, then the system is ready.

Before installing the switch, you must ensure:

1. It is accessible and cables can be connected easily
2. Cabling is away from:
  - \* Sources of electrical noise such as radios, transmitters and broadband amplifiers
  - \* Power lines and fluorescent lighting fixtures.
3. Keep water or moisture off
4. Airflow around the unit and through the vents in the side of the case is great for heat radiation (company recommend that you provide a minimum of 25 mm clearance)

To prolong the operational life of your units:

1. Never stack unit more than eight sets high if freestanding
2. Do not place objects on top of any unit or stack
3. Do not obstruct any vents at the sides of the case

### ***2.2 Rack-mount Installation***

---

The switch may standalone, or may be mounted in a standard 19-inch equipment rack. Rack mounting produces an orderly installation when you have a number of related network devices. The switch is supplied with rack mounting brackets and screws. These are used for rack mounting the unit.

Rack Mounting the Switch in the 19-inch rack:

1. Disconnect all cables from the switch before continuing.
2. Place the unit the right way up on a hard, flat surface with the front facing toward you.
3. Locate a mounting bracket over the mounting holes on one side of the unit.
4. Insert the screws and fully tighten with a suitable screwdriver.



5. Repeat the two previous steps for the other side of the unit.
6. Insert the unit into the 19" rack and secure with suitable screws (not provided).
7. Reconnect all cables.

## *2.3 Installing Network Cables*

---

### **Station Connections**


Reference to the wiring statement of the previous section; connect each station to the switch with correct type of cables.

### **Switch-to-Switch Connections**

In making a switch-to-switch connection, use every ports to connect another switch or backbone is strongly recommended. The Fast Ethernet ports provide the fat pipe to the server or backbone connectivity for boosting the total system performance. Reference to the wiring statement of the previous section; connect each station to the switch with correct type of cables.

## *2.4 Network Application*

---

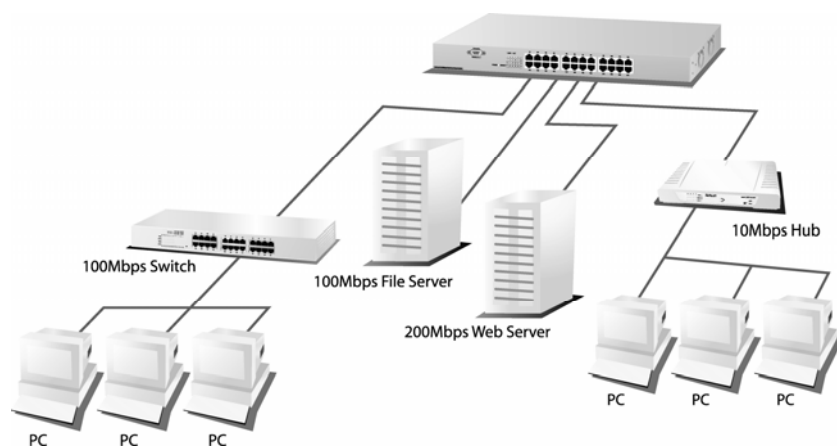

### 3. Management guide

---

This section instructs you how to enter and set up the configurations, which can be accessed by RS-232 serial port (out-of-band) on the rear panel or by Telnet session / Internet Browser over the network (in-band).

Factory Default value:

*IP :* 192.168.1.1  
*Subnet Mask :* 255.255.255.0  
*Default Gateway :* 192.168.1.254

#### 3.1 Access the Switch

---

##### Console Port (Out-of-band) connection

The operating mode of the console port is:

- DCE
- 9600 (Fix baud rate)
- n (No parity checking)
- 8 (8 Data bits)
- 1 (1 stop bit)
- None (No flow control)

After attaching a RS-232 cable (Straight-through) to the serial port of a PC running a terminal emulation program, press “**Enter**” key then login screen appears. Enter your username and password to login the management console.

##### **Note :**

The management functions of console program are exactly the same with web-based management interface but in text mode.

---


- Attention :**

  1. The factory default value of UserName and Password is “admin”
  2. System configurations via the Console Port only will be allowed by the way of master device

### In-Band Connections (Web Browser / Telnet)

To manage the switch through in-band access, you should configure the management station with an IP address and subnet mask compatible with your switch.

1. Running your Web Browser and enter the IP address "192.168.1.1" as the URL in the "address" field.
2. Key in the User name and password to pass the authentication. The factory default value of User Name and Password is "**admin**".

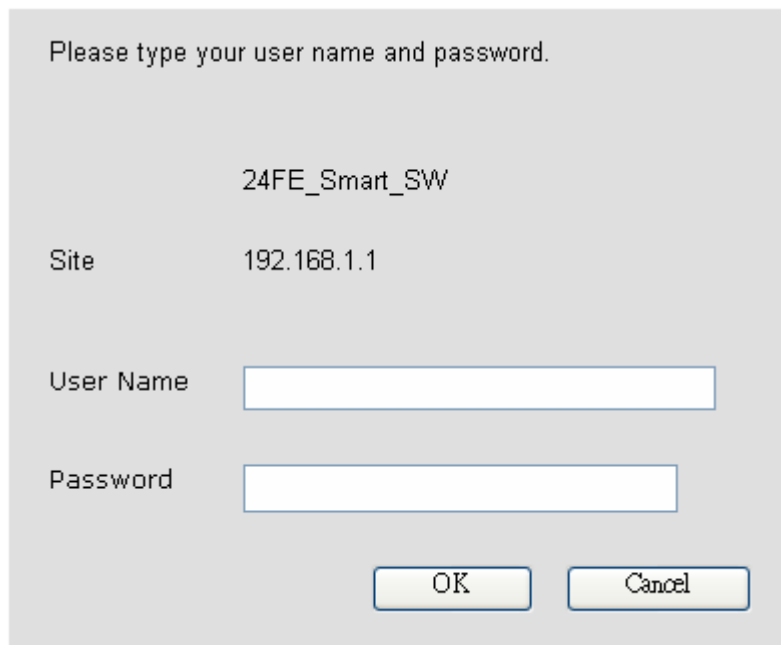

Please type your user name and password.

24FE\_Smart\_SW

Site 192.168.1.1

User Name

Password

OK Cancel

The image shows a web-based authentication dialog box. At the top, it says 'Please type your user name and password.' Below this, the device name '24FE\_Smart\_SW' is displayed. Underneath, the 'Site' is set to '192.168.1.1'. There are two input fields: 'User Name' and 'Password'. At the bottom right, there are two buttons: 'OK' and 'Cancel'.

3. After authentication procedure, the home page shows up.

### 3.2 Home Page

---

On the Home page, you can select the configuration by clicking the menu tabs located on the upside of the UI.

It includes,

- System
- Ports
- VLANs
- QoS
- Aggregation
- Discovery

System Configuration			
MAC Address	7d cd c7 00 cd a8	IP Address	192.168.1.1
SW Version	1.1	Subnet Mask	255.255.255.0
HW Version	1.0	Gateway	192.168.1.254
System management	Web, Console	Name	admin
System Name	24FE_Smart_SW	Password	*****

Apply

To restore the **default** Values of switch, Click the “**Default**” Button. If you want to **reboot** the switch, click the “**Reboot**” Button.

### 3.2.1 System

To set up the system configurations such as login value, system name and IP address.

The screenshot shows a web interface for system configuration. At the top, there are buttons for 'Default' and 'Reboot'. Below these are tabs for 'System', 'Ports', 'VLANs', 'QOS', 'Aggregation', and 'Discovery'. The 'System' tab is selected. The main section is titled 'System Configuration'. It contains two columns of configuration fields. The left column includes: MAC Address (7d c0 c7 00 c0 a8), S/W Version (1.1), H/W Version (1.0), System management (Web , Console), and System Name (24FE\_Smart\_SW). The right column includes: IP Address (192.168.1.1), Subnet Mask (255.255.255.0), Gateway (192.168.1.254), Name (admin), and Password (masked with dots). An 'Apply' button is located at the bottom left of the configuration area.

Items	Functions
Mac Address:	The Mac Address of the switch
S/W Version:	To check up the Software Version, see this.
H/W Version:	The Hardware version
System_name:	Name of the Switch
IP Address:	Set up the IP of Switch
Subnet Mask:	Set up the Subnet mask of Switch
Gateway:	Set up the Gateway of Switch
Name:	The Login name (default admin)
Password:	The Login password (default admin)

To save the configuration of the system, click **"apply"** to save

### 3.2.2 Ports

On the page, you can view the Port status, set up the Speed mode and enable the FDX flow control.

The screenshot shows a web interface for port configuration. At the top, there are tabs for System, Ports, VLANs, QOS, Aggregation, and Discovery. Below the tabs is a 'Port Configuration' section. It contains a table with 7 ports. Each port has a set of radio buttons for 'Admin' (Enable/Disable), a dropdown for 'Operate mode', a dropdown for 'Bandwidth', radio buttons for 'Flow control' (Enable/Disable), and a 'Link/Status' indicator. Port 4 is the only one with a green status, indicating it is up.

Port	Admin	Operate mode	Bandwidth	Flow control	Link/Status
1	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	Auto speed	Disabled	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down
2	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	10 Half	128Kbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down
3	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	10 Full	256Kbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down
4	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	100 Half	512Kbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Up/10HALF
5	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	100 Full	1Mbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down
6	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	Auto speed	2Mbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down
7	<input checked="" type="radio"/> Enable <input type="radio"/> Disable	Auto speed	4Mbps	<input type="radio"/> Enable <input checked="" type="radio"/> Disable	Down

Items	Functions
Admin:	Enable or Disable the Admin function
Bandwidth:	To control the bandwidth, you can select the speed limitation you need in the drop list. (Disable/128K/256K/512K/1M/2M/4M/8Mbps)
Operate mode:	Choose the Speed mode of port 10/100, Half/Full. If you set to auto speed, it will be auto-negotiation. (Auto Speed, 10M half, 10M full, 100M half, 100M full)
Flow Control:	Enable or Disable the Flow control
Link/Status:	To show the status of each port. When it's green, it means the connection is down. Otherwise, it's red.

To save the configuration of the system, click "apply" to save. To see the latest status of port, click refresh button.

### 3.2.3 VLANS

VLANs Configuration is for dividing the LAN into subnet groups for better network management. (24 VLAN groups total)

Mode:

1. Disable: Turn off the VLAN function by selecting the mode.
2. Port BASE: Group the port you select by entering the group number (Ex.1) in VLAN textbox and selecting the port numbers (Ex.1, 2,3,4) you want.

Buttons

Add: Add the entry into the VLAN Table

Remove: Remove the Entry you select

Modify: Modify the Entry you select

Apply: Apply the Mode you select

Provides web manage security function, click enable VLAN group web manage to support web manage function for VLAN group

The screenshot shows a web interface for VLAN configuration. At the top, there are tabs for 'System', 'Ports', 'VLANS', 'QOS', 'Aggregation', and 'Discovery'. The 'VLANS' tab is selected. Below the tabs, there are buttons for 'Default' and 'Reboot'. A table lists three VLAN entries: VLAN 1 (ports 1-24), VLAN 2 (ports 1-22), and VLAN 24 (ports 1-19). Below the table, the 'VLAN MODE' is set to 'PORT BASE'. A 'VLAN' field contains the value '1', and the 'Enable VLAN group web manage' checkbox is checked. A 'Select member' section shows a grid of checkboxes for ports 01 through 24, all of which are checked. At the bottom, there are 'Add', 'Remove', 'Modify', and 'Apply' buttons. A 'Note' section contains two points: '1. The VLAN value can't exceed 24' and '2. Port 13 will take over management once you enable VLAN'.

VLAN	Ports	Management
VLAN: 1	1,2,3,4,5,6,7,8,9,10,11,12,13,14,15,16,17,18,19,20,21,22,23,24	Enable management
VLAN: 2	1,2,3,4,5,6,7,8,9,10,14,15,16,17,18,19,20,21,22	
VLAN: 24	1,2,3,4,5,6,7,13,14,15,16,17,18,19	Enable management

VLAN MODE: ☐ DISABLE ☒ PORT BASE

VLAN:  ☒ Enable VLAN group web manage

Select member:

01	<input checked="" type="checkbox"/>	02	<input checked="" type="checkbox"/>	03	<input checked="" type="checkbox"/>	04	<input checked="" type="checkbox"/>	05	<input checked="" type="checkbox"/>	06	<input checked="" type="checkbox"/>	07	<input checked="" type="checkbox"/>	08	<input checked="" type="checkbox"/>	09	<input checked="" type="checkbox"/>	10	<input checked="" type="checkbox"/>	11	<input checked="" type="checkbox"/>	12	<input checked="" type="checkbox"/>
13	<input checked="" type="checkbox"/>	14	<input checked="" type="checkbox"/>	15	<input checked="" type="checkbox"/>	16	<input checked="" type="checkbox"/>	17	<input checked="" type="checkbox"/>	18	<input checked="" type="checkbox"/>	19	<input checked="" type="checkbox"/>	20	<input checked="" type="checkbox"/>	21	<input checked="" type="checkbox"/>	22	<input checked="" type="checkbox"/>	23	<input checked="" type="checkbox"/>	24	<input checked="" type="checkbox"/>

Note:

1. The VLAN value can't exceed 24

2. Port 13 will take over management once you enable VLAN

### 3.2.4 Aggregation/Trunking Configuration

To set up the Port trunk groups, select "Enable" of the group you need. Don't forget to click the "Apply" to save the setting.  
Supports 6 trunk groups for network application.

Default Reboot

System Ports VLANS QOS Aggregation Discovery

Aggregation/Trunking Configuration.

TRUNK GROUP 1:Port02;Port14	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
TRUNK GROUP 2:Port03;Port04;Port15;Port16	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
TRUNK GROUP 3:Port05;Port06;Port17;Port18	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
TRUNK GROUP 4:Port07;Port08;Port19;Port20	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
TRUNK GROUP 5:Port09;Port10;Port21;Port22	<input type="radio"/> Enable <input checked="" type="radio"/> Disable
TRUNK GROUP 6:Port11;Port12;Port23;Port24	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

Apply



### 3.2.5 Qos

There are three modes of Quality of Service to choose, TOS, Tag Base, and Port base. To Disable the QOS, click Disable and Click apply to save.

To use the **TOS**, select TOS and click **Apply** to save.

To enable the **Tag Base**, select Tag base and click **Apply** to save.

When you enable **Port Base**, packets from the port you select will have higher priority.

To enable the Port base,

1. Select the port-base
2. Select the port-base ratio (1:4; 1:8; 1:16; Always High) The higher a ratio is, the higher priority the port will get.
3. Select the ports in the table (High means high Priority, and Low means Low priority). The priority depends on the Port Base rate.
4. Click apply to save

DefaultReboot

SystemPortsVLANSQOSAggregationDiscovery

**Quality of Service (QoS) Configuration.**  
Please click the Apply button if you do any change.

Select QOS Mode: ☐ TOS ☐ TAG BASE ☒ PORT BASE ☐ DISABLE

SELECT RATE:	1:4
Port	Port priority setup
1	<input checked="" type="radio"/> HIGH <input type="radio"/> LOW
2	<input checked="" type="radio"/> HIGH <input type="radio"/> LOW
3	<input checked="" type="radio"/> HIGH <input type="radio"/> LOW
4	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW
5	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW
6	<input checked="" type="radio"/> HIGH <input type="radio"/> LOW
7	<input checked="" type="radio"/> HIGH <input type="radio"/> LOW
8	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW
9	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW
10	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW
11	<input type="radio"/> HIGH <input checked="" type="radio"/> LOW

### 3.2.6 Discovery

When you install several 24port Fast Ethernet web-smart switches, the discovery management tool helps you to search and access those switches on the LAN easily. Therefore you can access any switch on your LAN without memorizing those IP addresses. You can only find switches with the IP Address compatible with the one you access.

**Note.** The Maximum number of Address list is 16.

#### Auto Search

1. Click the "Auto search" button to find the switches.
2. The IP address & name of Switch list will appear.
3. Click the one you want to access.

**Discovery**

**Auto Search**

**Manual Add**

**IP Address:**  **Name:**


show search ip:			
NO	search ip	system name	
show the manual add result:			
NO	manual ip	system name	delete
1	<a href="#">10.1.1.1</a>	24FE_Smart_SW	<input checked="" type="checkbox"/>
2	<a href="#">192.168.1.5</a>	24FE_Smart_SW	<input type="checkbox"/>
3	<a href="#">10.1.1.4</a>	24FE_Smart_SW	<input checked="" type="checkbox"/>

### 3.2.7 Default

---

To restore to default values,

1. Click the default button on the Home page
2. Click "Apply" to activate. Don't power off the switch while it's working.

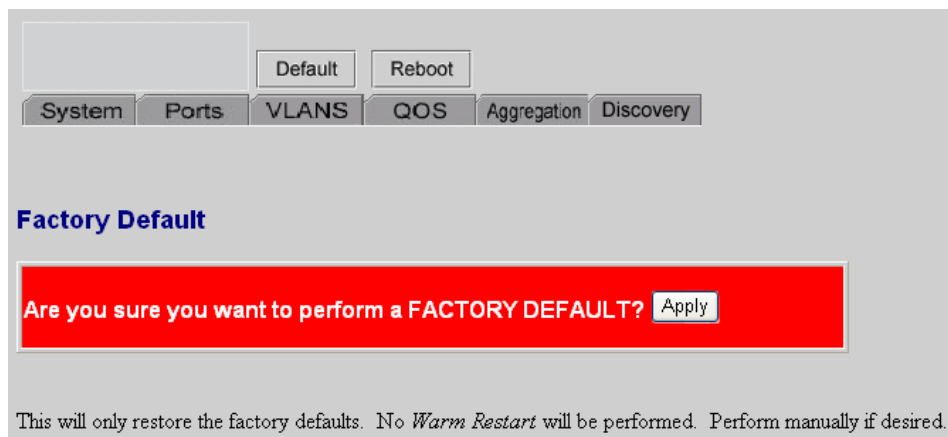


The screenshot shows a web interface with a top navigation bar containing buttons for System, Ports, VLANS, QOS, Aggregation, and Discovery. Above these buttons are two larger buttons: Default and Reboot. The main content area has a heading "Factory Default" in blue. Below the heading is a red warning box with the text "Are you sure you want to perform a FACTORY DEFAULT?" and an "Apply" button. At the bottom of the page, a note states: "This will only restore the factory defaults. No *Warm Restart* will be performed. Perform manually if desired."

### 3.2.8 Reboot

---

To reboot the switch,

1. Click the Reboot button on the Home page
2. Click "Apply" to activate. Don't power off the switch while it's working.



The screenshot shows a web interface with a top navigation bar containing buttons for System, Ports, VLANS, QOS, Aggregation, and Discovery. Above these buttons are two larger buttons: Default and Reboot. The main content area has a heading "Warm Restart" in blue. Below the heading is the text "PLEASE LOGIN AGAIN AFTER YOU CLICK THE APPLY BUTTON." followed by a red warning box with the text "Are you sure you want to perform a Warm Restart?" and an "Apply" button.

## 4. Product Specifications

---

<b>Standard</b>	IEEE802.3 10BASE-T IEEE802.3u 100BASE-TX IEEE802.3x full-duplex operation and flow control IEEE802.1p Traffic prioritization
<b>Interface</b>	24 * 10/100Mbps auto MDI/MDI-X RJ-45 switching ports 1 * RS-232 Console port
<b>Cable Connections</b>	RJ-45 (10BASE-T): Category 3,4,5 UTP/STP RJ-45 (100BASE-TX): Category 5 UTP/STP
<b>Network Data Rate</b>	10/100Mbps Auto-negotiation
<b>Transmission Mode</b>	10/100Mbps Full-duplex, Half-duplex
<b>LED indications</b>	System Power RJ-45 Port 10/100M Link/Act
<b>Memory</b>	8K MAC entries 320K bytes Buffer Memory
<b>Emission</b>	FCC Class A CE Mark Class A VCCI-A
<b>Operating Temperature</b>	0° ~ 40°C (32° ~ 104°F)
<b>Operating Humidity</b>	10% - 90%
<b>Power Supply</b>	Internal power 100-240V/ 50-60Hz